

OTTO®

REVO NC1

SPEAKER MICROPHONES

- Microphone mounted in fin for unparalleled passive noise-canceling performance
- Contoured design for easy handling
- Protected against dust and blowing rain to MIL-STD-810
- Earphone jack
- Clothing spring clip



INSTALLATION:

1. Turn radio off.
2. Remove any dust caps or covers from radio accessory connector.
3. Attach speaker microphone to the radio accessory connector.
4. Tighten mounting thumbscrew, if required.



OPERATION:

Turn the radio on and operate it as explained in the operating instructions supplied with the radio. Installing the speaker microphone (1) bypasses the radio's speaker and routes the speaker output to the speaker microphone and (2) disables the radio's microphone and enables the speaker microphone. To enable the microphone, press the large PTT actuator located on the side of the speaker microphone.

Earphone jack

- Remove the protective cover from the earphone jack.
- Insert the audio accessory into the earphone jack.
Audio will be muted in the speaker microphone and routed to the accessory.
- CAUTION: to maintain the environmental seal, replace the protective cover when the plug is not in use.

Using noise-canceling feature effectively

The Revo NC1 provides excellent performance under a wide range of conditions. In noisy environments, maximum noise-canceling performance is achieved when the microphone is held close to the mouth. Hold the Revo NC1 less than 1 inch from the mouth, and speak directly into the microphone located in the fin atop the Revo NC1.

Information on Disposal of Old Electrical and Electronic Equipment (applicable for EU countries that have adopted separate waste collection systems).



Products with the symbol (crossed-out wheeled bin) cannot be disposed as household waste.

Old electrical and electronic equipment should be recycled at a facility capable of handling these items and their waste byproducts. Contact your local authority for details for locating a recycle facility nearest to you.

Proper recycling and waste disposal will help conserve resources while still preventing detrimental effects on our health and the environment.

MAINTENANCE:

If necessary, the external surfaces of the speaker microphone may be cleaned with a mild soap solution and warm water.

Optional Earphone Kits	Part Number
Earphone with acoustic tube, 3.5 mm straight plug, coil cord (30" extended length), black	V1-10305
Earphone with acoustic tube, 3.5 mm right angle plug, coil cord (30" extended length), black	V1-10433
Ear hanger, 3.5 mm right angle plug, coil cord, (30" extended length), black	V1-EH23R131
Earphone with acoustic tube, 2.5 mm straight plug, coil cord (30" extended length), black	V1-10282
Earphone with acoustic tube, 2.5 mm right angle plug, coil cord (30" extended length), black	V1-10432
Ear hanger, 2.5 mm right angle plug, coil cord, (30" extended length), black	V1-EH22R131

For warranty information, customer service or replacement parts, please contact:

OTTO[®]

10 West Main Street • Carpentersville, IL U.S.A. 60110

Toll Free Phone: 888-234-OTTO (6886)

Phone: 847-428-7171 • Fax: 847-428-1956

E-mail: info@ottoexcellence.com

www.ottoexcellence.com