

OTTO®


Breeze

HEADSET

The OTTO Breeze Headset for Two-Way-Radio communications is intended for use in areas with moderate background noise to provide privacy and noise isolation.

These headsets feature:

- Flexible boom with omni-directional microphone
- Microphone windscreen
- Sliding clothing clip

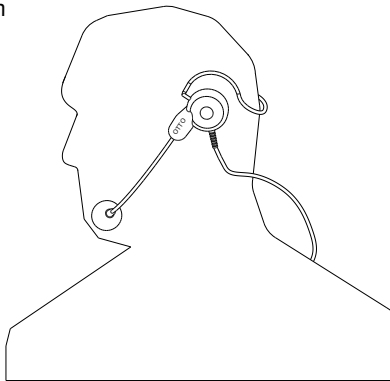

INSTALLATION:

1. Turn the radio off. Installation of the headset while the radio is on may cause the radio to transmit constantly, locking up your radio system. If this should happen, turn off the radio. The radio can then be turned back on, restoring normal operations.
2. As required, remove any dust caps or covers from the radio accessory connector and install appropriate adapters.
3. Attach headset to the radio accessory connector. Tighten mounting thumbscrew, if required.
4. If applicable, install appropriate accessory clamp.


OPERATION:

Turn the radio on and operate it as explained in the operating instructions supplied with the radio. Installing the headset (1) bypasses the radio's speaker and routes the output to the headset's speaker, and (2) disables the radio's microphone and enables the boom microphone.

Microphone position is adjusted by bending the boom to place the microphone to within one inch of the mouth.

Microphone is activated by radio push-to-talk unless the headset is supplied with an in-line push-to-talk.

Note: Speaker with boom worn on left ear. Headband to be positioned behind the head.

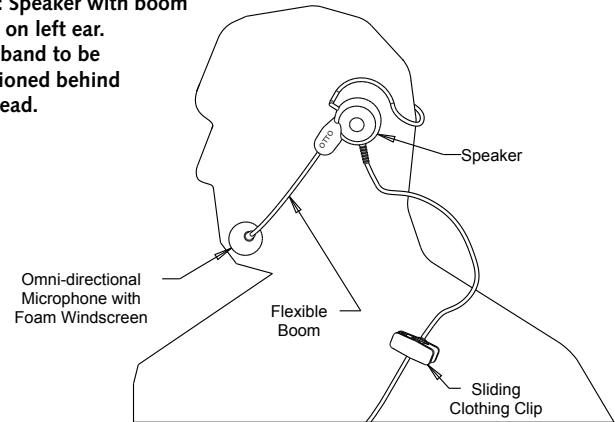

Information on Disposal of Old Electrical and Electronic Equipment (applicable for EU countries that have adopted separate waste collection systems).



Products with the symbol (crossed-out wheeled bin) cannot be disposed as household waste.

Old electrical and electronic equipment should be recycled at a facility capable of handling these items and their waste byproducts. Contact your local authority for details in locating a recycle facility nearest to you.

Proper recycling and waste disposal will help conserve resources while still preventing detrimental effects on our health and the environment.

Replacement Parts

Description	Part Number
Hygiene Kit – Windscreen & O-Ring (5 per pack)	C807417
Clothing Clips (5 per pack)	C100870-05
Hygiene Kit – Earpads & Temple Pads (5 per pack)	C807418



For warranty information, customer service, or to order replacement parts, please contact:

OTTO[®]

10 West Main Street • Carpentersville, IL U.S.A. 60110

Phone: 847-428-7171 • Fax: 847-551-1343

E-mail: info@ottoexcellence.com

www.ottoexcellence.com